

HYCO

Manufacturing Ltd

OSCILLATING PEDESTAL FAN 16P

READ AND SAVE THESE INSTRUCTIONS

WARNING

Read Rules and instructions carefully for safe operation.

If the supply cord is damaged, it must be replaced by manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

RULES FOR SAFE OPERATION

1. Never insert fingers, pencils, or any other object through the grille when fan is running.
2. Disconnect fan when moving from one location to another.
3. Disconnect fan when removing grilles for cleaning.
4. Be sure fan is on a stable surface when operating to avoid overturning.
5. DO NOT get the fan wet, it may create an electrical safety hazard.



COLUMN ASSEMBLY

1. Attach column to stand with 4 screws as shown.
2. Unscrew / take out height adjustment ring.
3. Slide stand ornament down the column to rest on stand.
4. Pull out the extension pipe and screw / fasten the height adjustment ring back.

CAUTION: Height adjustment ring must be fully fastened before the assembly of the motor section to the stand.

BLADE AND GRILLES ASSEMBLY

  1. Unscrew the spinner clockwise and the nut counter-clockwise then remove both of them.
2. Set the rear grille in the proper position with handle up.
3. Screw on plastic nut tightly to attach rear grille.
4. Discard plastic sleeve on motor shaft.
5. Install the blade onto the motor shaft until it reaches the retaining pin.
6. Screw spinner on to motor shaft counter clockwise. Screw the plastic nut on counter-clockwise in order to block fan's blade.
7. Unscrew the locking screw mounted on the rear grille. Mount front grille onto rear grille with the small round holes on the top

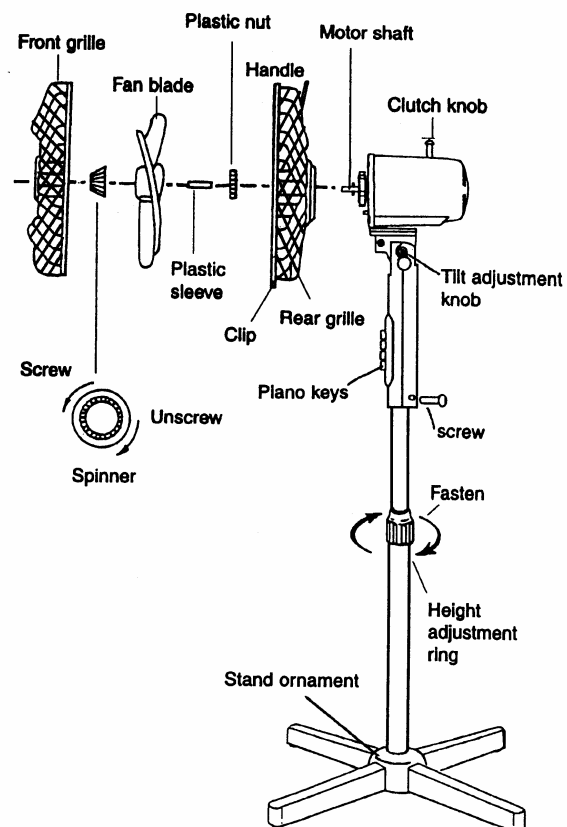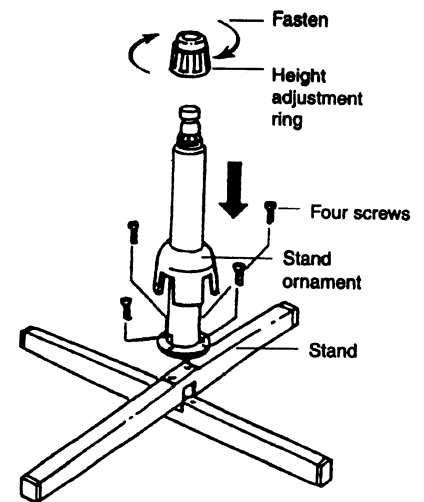

matched for the passage of locking screw. Fix both grilles with clips and then use screwdriver to tighten the locking screw.

OPERATING INSTRUCTIONS

1. To make / stop the fan head oscillate, push down / pull up the clutch knob.
2. The airflow can be adjusted upward or downward by pushing the grilles slightly to the desired up or down direction.
3. Loosening the height Adjustment ring carefully rising or lowering the fan and firmly re-tightening the ring can adjust the height of the fan.
4. Depressing the piano keys controls speed (0-1-2-3).
5. Plug the power supply cord into a wall outlet.

CLEANING

1. Be sure to unplug from the electrical supply source before cleaning.
2. Plastic parts should be cleaned with mild soap and a damp cloth or sponge.
3. To disassemble each part, reverse the order of assembly.
4. Ensure that you do not allow water or any other liquid to enter the motor whilst cleaning.

Plug Replacement

 
1. The appliance must be connected to a 240 volts AC supply by means of a three pin socket.
2. The appliance is supplied with a rewireable 13 amp 3 pin plug fitted with a 3 amp fuse. Should the fuse require replacement, it must be replaced with a fuse rated at 3 amp and approved to BS1362.
3. If the mains plug is unsuitable for the socket outlet in your home or is removed for any other reason, then the cut off plug should be disposed of safely to prevent the hazard of electric shock.
4. There is a danger of electric shock if the cut off plug is inserted into any 13 amp socket outlet.

The wires in the mains lead on this appliance are coloured in accordance with the following code:

Green and Yellow – Earth

Blue – Neutral

Brown – Live

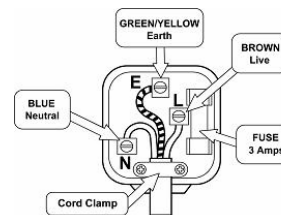

As the colours may not correspond with the markings identifying the terminals in your plug proceed as follows.

1. The green and yellow wire must be connected to the terminal in the plug which is marked with the letter E or with the earth symbol $\frac{\perp}{\equiv}$ or coloured green and yellow.
 - The blue wire must be connected to the terminal marked N or coloured black.
 - The brown wire must be connected to the terminal marked L or coloured red.

Conformity with Directives

1. This product is CE marked to denote conformity with Directives 73/23/EEC (Low Voltage) and 89/336/EEC (Electromagnetic Compatibility), as amended.
2. Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

Hyco Manufacturing WF10 1NX 01977 517555 www.hyco.co.uk

